

Kamai Quick Reference Guide (EMEA)

1. Welcome!

Thank you for using Entone's Kamai Hybrid TV Receiver. This quick reference gives quick instruction for setting up and using Kamai. For detailed setup and usage instruction, please refer to the *Kamai User's Guide* and the *URC 4 User's Guide* in <http://www.entone.com>.

2. Before You Begin

Check that the video output connector of the Kamai is properly connected to the input connector of the TV(s).

In your TV, select the input source that the Kamai is used.

"TV OUT" output by default uses RF TV channel 3.

Check that you have connected Kamai "10/100 ETHERNET" to your network access device. For details of connecting Kamai to the network, please refer to your service provider.

Software upgrade is required when you power up Kamai for the first time. Software upgrade may take 5-10 minutes. Do not power off during software upgrade.

3. Install Remote Control Batteries

Install the two AA batteries (provided) into the remote control.




Important!! Use only new AA Alkaline batteries to insure consistent operation.

4. Understanding the Remote Control

This 3 mode Universal Remote Control can be programmed to control your Kamai and up to two other devices.

Kamai uses infrared (IR) to receive remote control signals. IR signals travel only short distances (10m or less), and cannot go through walls or other solid objects. You must point the remote control directly at the Kamai unit, with no objects blocking the line of sight to the front panel of the Kamai unit.

5. Using the Remote Control

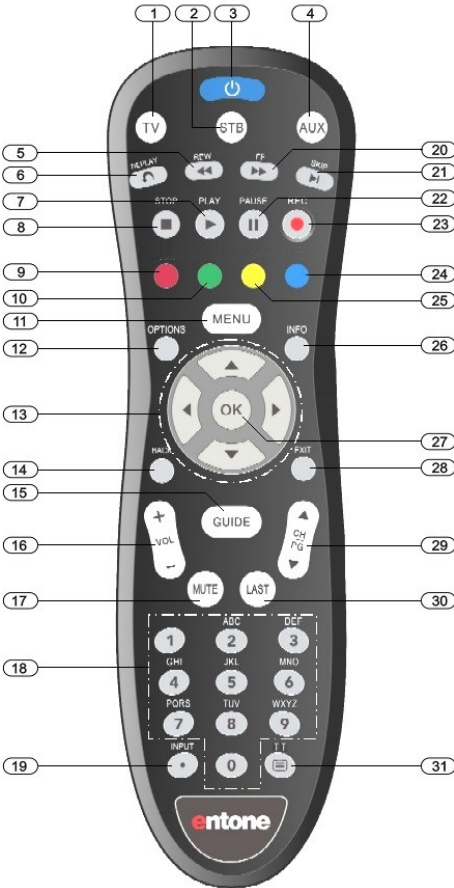

The diagram and list provide a brief description of your remote control features. Entone provides this as a general guide to remote control usage. Functions may vary between different service providers.

Please contact your service provider for detailed functions and usages.

1. **TV** – Selects to control TV
2. **STB** – Puts remote control in STB mode
3. **POWER** – Switches the power on/off for the currently selected device. Switches STB to power on / standby mode
4. **AUX** – Selects to control AUX device
5. **REW** – Fast rewinds video for VOD / DVR / live TV
6. **REPLAY** – Skips backward 30s of video for VOD / DVR
7. **PLAY** – Plays video for VOD / DVR / live TV
8. **STOP** – Stops video for VOD / DVR / live TV
9. **RED** – Feature enabled by service provider, contact service provider for more details
10. **GREEN** – Feature enabled by service provider, contact service provider for more details
11. **MENU** – Shows the on-screen menu
12. **OPTIONS** – Feature enabled by service provider, contact service provider for more details
13. **ARROW KEYS** – Navigates right, left, up, down in the on-screen guide
14. **BACK** – Back button for on-screen menu Feature enabled by service provider, contact service provider for more details
15. **GUIDE** – Shows the electronic program guide
16. **VOL + / -** – Increases or decreases volume of the currently selected device
17. **MUTE** – Turns the volume of the currently selected device off
18. **NUMBER KEYS** – Allows direct access to specific channels and menu items
19. **INPUT** – Changes the current A/V input of the selected device
20. **FF** – Fast-forwards the video for VOD / DVR / live TV
21. **SKIP** – Skips forward the video for VOD / DVR
22. **PAUSE** – Pauses video for VOD / DVR / live TV
23. **REC** – Records live TV
24. **BLU** – Feature enabled by service provider, contact service provider for more details
25. **YELLOW** – Feature enabled by service provider, contact service provider for more details
26. **INFO** – Shows on-screen information about the current TV / VOD / DVR program
27. **OK** – Executes the currently selected menu option
28. **EXIT** – Exits the current menu item
29. **CH UP/DOWN** – Changes channel up or down
30. **LAST** – Changes channel to the most recently viewed channel
31. **TT** – Toggles teletext on or off

6. Manually Program Additional Devices

Perform the following steps to program the TV and AUX device:

1. Locate the device code for your desired device in the device code table provided in the Appendix. If you could not find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can go to the next section to try the auto-search procedures.
2. Turn on your device and with media inserted (if applicable).
3. On the remote control, press a device mode key for 5 seconds (i.e., "TV" or "AUX"). The device mode key will light up.
NOTE: Use the "AUX" mode key to program control of VCR, DVD player, cable box, satellite set-top-box and audio device.
4. Enter the four-digit device code for you device. If you perform this procedure correctly, the selected device mode key backlight will blink twice. **NOTE:** If you enter an invalid device code, the selected device mode key will fast blink 7 times. Device program mode will be terminated.
5. Aim the remote control at your device and press the "POWER" once. The device should be turned off. If it does not respond, repeat the above steps.

7. Auto-Scan (Program Additional Devices)

If your device does not respond to the remote control after trying all devices codes listed for you brand, or if your brand is not listed at all, try searching for your device code as follows:

1. Power on the device and on the remote control, press a device mode key (i.e., "TV" or "AUX") and hold for 5s. The device mode key will light up.
NOTE: Use the "AUX" mode key to program control of VCR, DVD player, cable box, satellite set-top-box and audio device.
2. Press the "POWER" key once and aim your new remote at the device.
3. Press either the "CH UP" key or "CH DOWN" key to do device auto-scan.
4. In this search mode, the remote control will send IR codes from the library in 5 second intervals. The device key will be on and blink every 5 seconds while in the device scan mode.
5. If the device turns off, a working code has been found. Press "OK" once to lock in the code. The selected mode key will blink twice.
6. If all code sets of that device are exhausted in the search and the "OK" is not pressed, the selected device key will fast blink 7 times and the search mode will be terminated.

Appendix - Device Codes

Your Universal Remote Control (URC) can control many brands and models of television, VCR, DVD and other types of audio-visual equipment. The following pages list device codes for many categories and brands of equipment. Many brands list more than one code, and you may need to test several codes to find the best match for your equipment. If you cannot locate your brand, or none of the listed device codes works, then you may still use the auto-scan feature to try to locate a suitable device code.

TV - Digital TV

Philips	0152, 0015, 0038
Samsung	0003
Sony	0032, 0008, 0217

TV - HT Projector

Mitsubishi	0052
Panasonic	0035
Philips	0113
Sanyo	0225
Sharp	0082

Sony	0085, 0151
Toshiba	0020

TV - LCD Projection TV

Sharp	0074
Sony	0108
Toshiba	0233

TV - LCD TV

Bush	0172
Daewoo	0037
Denver	0147

Goodmans	0006
Hitachi	0235
JVC	0218
LG	0188, 0263, 0264, 0055, 0062, 0210, 0220, 0262, 0013, 0096, 0173, 0208, 0122
Matsui	0243
Panasonic	0203, 0144, 0265
Philips	0039, 0192

Samsung	0091, 0107, 0133, 0162, 0014, 0221, 0034, 0255, 0174, 0241
Sharp	0053, 0025, 0056, 0137, 0166, 0161, 0257, 0128, 0050
Sony	0135, 0195, 0252, 0069, 0212
Toshiba	0266, 0042, 0228
Viewsonic	0092, 0224

TV - LCD TV/RadioTuner Combo

Philips	0039
---------	------

TV - Plasma Display

Hitachi	0145, 0102
Panasonic	0010, 0213
Philips	0046, 0070
Pioneer	0065, 0117, 0214, 0238
Samsung	0004

TV - PLASMA TV

LG	0208
----	------

TV - Plasma TV

Philips	0120
Samsung	0029
Toshiba	0247

TV - Plasma TV Monitor

Daewoo	0143
Hitachi	0098
JVC	0017
LG	0016, 0080
Philips	0001, 0073
Thomson	0260, 0101

TV - Projection TV

Hitachi	0164
LG	0140, 0122
Pioneer	0090
Samsung	0219
Telefunken	0249

TV - TV

A.R. Systems	0223
Acme	0036
Acura	0106, 0130
ADC	0198

Admiral	0095, 0198, 0027, 0242
Adyson	0036, 0072, 0175, 0200, 0125
Agashi	0200, 0125
Agazi	0198
AGB	0136
Aiko	0036, 0106, 0130, 0223, 0072, 0175, 0200, 0125
Aim	0223
Aiwa	0061
Akai	0106, 0048, 0105, 0187, 0130, 0223, 0175, 0183, 0148, 0200, 0125, 0136
Akiba	0048, 0223, 0183, 0206
Akura	0198, 0048, 0130, 0223, 0183, 0206
Alaron	0200
Alba	0036, 0106, 0048, 0187, 0130, 0179, 0223, 0072, 0183, 0200, 0209
Alcyon	0064
Allorgan	0175, 0125
Allstar	0105, 0223
Amplivision	0036, 0175, 0229, 0125, 0209
Amstrad	0198, 0106, 0048, 0130, 0223, 0183, 0136
Anam	0106
Anglo	0106, 0130
Anitech	0198, 0106, 0130, 0223, 0064
Ansonic	0106, 0130, 0190, 0223, 0007, 0209
Arc en Ciel	0087
Arcam	0072, 0175, 0200, 0125
Arcam Delta	0036
Aristona	0105, 0187, 0190, 0223, 0148
Arthur Martin	0229
ASA	0095, 0242

Asberg	0105, 0223, 0064
Astra	0106
Asuka	0198, 0036, 0048, 0072, 0175, 0183, 0206, 0200, 0125
Atlantic	0036, 0105, 0187, 0223, 0072, 0200
Atori	0106, 0130
Auchan	0229
Audiosonic	0036, 0106, 0048, 0105, 0187, 0223, 0175, 0183, 0125, 0209
AudioTon	0036, 0175, 0125, 0209
Ausind	0064
Autovox	0095, 0198, 0036, 0064, 0175, 0125
Awa	0200, 0125
Baird	0175, 0125
Bang & Olufsen	0095
Basic Line	0106, 0048, 0105, 0130, 0223, 0183, 0206, 0125
Bastide	0036, 0175, 0125
Baur	0187, 0178, 0223
Bazin	0175, 0125
Beko	0146, 0047, 0223, 0209
Beon	0105, 0187, 0223
Best	0209
Bestar	0105, 0223, 0209
Binatone	0036, 0175, 0125
Blacktron	0206
Blackway	0206
Blue Sky	0048, 0223, 0183, 0206
Blue Star	0206
Boots	0036, 0175, 0125
BPL	0223, 0206
Brandt	0176, 0149, 0204, 0087
Brinkmann	0223
Briovega	0095, 0105, 0187, 0223
Britannia	0036, 0072, 0175, 0200, 0125

Bruns	0095
BSR	0088
BTC	0048, 0183
Bush	0246, 0253, 0231, 0061, 0106, 0048, 0027, 0105, 0088, 0187, 0130, 0179, 0223, 0175, 0183, 0206, 0125
Capsonic	0198
Carena	0223
Carrefour	0179
Cascade	0106, 0130, 0223
Cathay	0105, 0187, 0223
CCE	0125
Centurion	0105, 0187, 0223
Century	0095
CGE	0088, 0064, 0209
Cimline	0106, 0130, 0183
City	0106, 0130
Clarivox	0187
Clatronic	0198, 0036, 0106, 0048, 0105, 0130, 0223, 0064, 0175, 0183, 0125, 0209
CMS	0200
CMS Hightec	0125
Concorde	0106, 0130
Condor	0036, 0105, 0130, 0223, 0072, 0206, 0200, 0209
Contec	0036, 0106, 0130, 0179, 0072, 0200
Continental Edison	0087
Cosmel	0106, 0130
Crosley	0095, 0088, 0064
Crown	0106, 0105, 0187, 0130, 0223, 0064, 0209
CS Electronics	0036, 0048, 0072, 0183, 0200
Cybertron	0048, 0183

Daewoo	0022, 0254, 0160, 0118, 0155, 0248, 0036, 0106, 0105, 0130, 0223, 0072, 0175, 0183, 0200, 0125, 0109
Dainichi	0048, 0072, 0183, 0200
Dansai	0198, 0105, 0187, 0223, 0072, 0200, 0125
Dantax	0187, 0209
Dawa	0223
Daytron	0106, 0130
De Graaf	0027
Decca	0036, 0105, 0187, 0223, 0175, 0125, 0136
Desmet	0105, 0187, 0223
Diamant	0223
Diamond	0200
Dixi	0106, 0105, 0187, 0130, 0223, 0125
DTS	0106, 0130
Dual	0036, 0088, 0223, 0175, 0125
Dual-Tec	0036, 0106, 0088, 0175
Dumont	0095, 0036, 0175, 0125
Dux	0187
Dynatron	0105, 0187, 0223
Elbe	0223, 0183, 0125, 0007, 0209, 0136
Elbe-Sharp	0136
Elcit	0095, 0136
ELECTRO TECH	0106
Elektra	0206
Elin	0036, 0105, 0187, 0130, 0223, 0072, 0200
Elite	0048, 0105, 0223, 0183
Elman	0088
Elta	0106, 0130, 0200
Emerson	0095, 0223, 0209
Emperor	0206

Erres	0105, 0187, 0190, 0223
ESC	0125
Etron	0106
Eurofeel	0125
Euro-Feel	0198
Euroline	0187
Euroman	0206, 0200, 0125, 0209
Euromann	0198, 0036, 0105, 0223, 0072, 0175
Europhon	0036, 0105, 0088, 0223, 0175, 0200, 0125, 0136
Expert	0229
Exquisit	0223
Fenner	0106, 0130
Ferguson	0041, 0153, 0187
Fidelity	0036, 0027, 0223, 0072, 0200
Filsai	0125
Finlandia	0027
Finlux	0095, 0036, 0105, 0088, 0187, 0223, 0064, 0175, 0125, 0136
FIRST LINE	0036, 0106, 0105
Firstline	0130, 0223, 0072, 0175, 0200, 0125
Fisher	0095, 0036, 0088, 0179, 0175, 0125, 0209
Flint	0105, 0223, 0183
Formenti	0095, 0036, 0088, 0187, 0064, 0072, 0200
Formenti-Phoenix	0200
Fortress	0095
Fraba	0223, 0209
Friac	0209
Frontech	0198, 0106, 0027, 0242, 0130, 0125
Fujitsu	0175, 0125
Fujitsu General	0125
Funai	0198

Galaxi	0223
Galaxis	0223, 0209
GBC	0106, 0088, 0130, 0183
Geant Casino	0229
GEC	0036, 0242, 0105, 0187, 0223, 0175, 0125, 0136
Geloso	0106, 0027, 0088, 0130
General Technic	0106, 0130
Genexxa	0048, 0242, 0105, 0223, 0183
Giant	0125
GoldHand	0200
Goldline	0223
GoldStar	0036, 0106, 0027, 0105, 0088, 0187, 0130, 0223, 0072, 0175, 0200, 0125, 0157, 0209
Goodmans	0216, 0198, 0106, 0105, 0187, 0130, 0179, 0223, 0175, 0148, 0125, 0157, 0136, 0109
Gorenje	0209
GPM	0048, 0183
Graetz	0242
Granada	0036, 0027, 0105, 0187, 0190, 0179, 0223, 0064, 0175, 0229, 0125, 0136
Grandin	0106, 0048, 0187, 0206
Gronic	0125
Grundig	0044, 0060, 0040, 0223, 0064, 0148, 0209
Halifax	0198, 0036, 0072, 0175, 0200, 0125
Hampton	0036, 0072, 0175, 0200, 0125
Hanseatic	0036, 0106, 0105, 0088, 0187, 0130, 0223, 0175, 0206, 0125, 0007, 0209

Hantarex	0106, 0130, 0223, 0136
Hantor	0223
Harwood	0130, 0223
HCM	0198, 0036, 0106, 0130, 0223, 0175, 0183, 0206, 0125
Hema	0130, 0175, 0125
Higashi	0200
HiLine	0223
Hinari	0106, 0048, 0105, 0187, 0130, 0179, 0223, 0183
Hisawa	0048, 0183, 0206, 0229
Hitachi	0182, 0009, 0036, 0027, 0242, 0088, 0179, 0223, 0175, 0125, 0136, 0109
Hornyphon	0105
Hornyphon e	0223
Hoshai	0048, 0183
Huanyu	0036, 0072, 0200
Hygashi	0036, 0072, 0175, 0200, 0125
Hyper	0036, 0106, 0088, 0130, 0072, 0175, 0200, 0125
Hypson	0198, 0036, 0105, 0187, 0223, 0175, 0206, 0229, 0125
Iberia	0223
ICE	0198, 0036, 0106, 0048, 0105, 0130, 0223, 0072, 0175, 0183, 0200, 0125
ICeS	0072, 0183, 0200
Imperial	0242, 0105, 0088, 0223, 0064, 0209
Indiana	0105, 0187, 0223
Ingelen	0242
Ingersol	0106, 0130
Inno Hit	0036, 0106, 0048, 0105, 0187, 0130, 0223, 0064, 0175, 0183, 0125, 0157, 0136
Innovation	0198, 0106

Interactive	0209
Interbuy	0106, 0130
Interfunk	0095, 0242, 0105, 0187, 0190, 0223, 0209
International	0200
Intervision	0198, 0036, 0223, 0175, 0183, 0206, 0125, 0209
Irradio	0106, 0048, 0105, 0187, 0130, 0223, 0064, 0183, 0157
Isukai	0048, 0223, 0183, 0206
ITC	0036, 0088, 0175, 0125
ITS	0048, 0105, 0223, 0072, 0183, 0206, 0200
ITT	0106, 0242
ITV	0106, 0187, 0223
JVC	0105, 0179, 0183
Kaisui	0036, 0106, 0048, 0130, 0223, 0072, 0175, 0183, 0206, 0200, 0125
Kamosonic	0036
Kamp	0036, 0072, 0200
Kapsch	0242
Karcher	0036, 0106, 0187, 0223, 0206, 0209
Kawasho	0200
Kendo	0027, 0223, 0209
Kennedy	0088
KIC	0125
Kingsley	0036, 0072, 0200
Kneissel	0223, 0007, 0209
Kolster	0105, 0223
Konka	0048, 0183
Korpel	0105, 0187, 0223
Korting	0095, 0209
Kosmos	0223
Koyoda	0106
KTV	0036, 0125
Kyoto	0200, 0125
Lasat	0209
Lenco	0106, 0130

Lenoir	0036, 0106, 0130
Leyco	0198, 0105, 0187, 0223
LG	0099, 0036, 0106, 0027, 0105, 0088, 0187, 0130, 0223, 0072, 0175, 0200, 0125, 0157, 0209
Liesenk	0187
Liesenkottel	0223
Life	0198, 0106
Lifetec	0198, 0106, 0130, 0223, 0183
Lloyds	0130
Loewe	0026, 0079, 0223, 0007, 0209, 0136
Loewe Opta	0095, 0105, 0187
Luma	0027, 0187, 0130, 0223
Lumatron	0027, 0105, 0187, 0223, 0175, 0125
Lux May	0105
Luxor	0036, 0027, 0125, 0157
M Electronic	0036, 0106, 0242, 0105, 0187
Magnadyn e	0095, 0088, 0187, 0136
Magnafon	0036, 0064, 0072, 0200, 0136
Magnum	0198, 0106
Mandor	0198
Manesth	0198, 0036, 0105, 0187, 0223, 0175, 0125
Marantz	0105, 0187, 0223
Marelli	0095
Mark	0105, 0187, 0130, 0223, 0072, 0175, 0200, 0125
Masuda	0125
Matsui	0036, 0106, 0027, 0105, 0187, 0130, 0179, 0223, 0175, 0148, 0125, 0136
Mediator	0105, 0187, 0190, 0223, 0148

Medion	0198, 0106, 0223
M- Electronic	0130, 0223, 0072, 0175, 0200, 0125
Melvox	0229
Memorex	0106, 0130
Memphis	0106, 0130
Mercury	0130, 0223
Metz	0095
Micromaxx	0198, 0106
Microstar	0198, 0106
Minerva	0064, 0136
Minoka	0105, 0223
Mitsubishi	0095, 0105, 0179, 0223
Mivar	0036, 0064, 0072, 0200, 0125, 0157, 0227, 0007, 0209, 0136, 0097
Motion	0064
MTC	0200, 0209
Multi System	0187
Multitech	0036, 0106, 0027, 0088, 0187, 0130, 0223, 0072, 0175, 0200, 0125, 0209
Murphy	0036, 0072, 0200
Naonis	0027
NEC	0179, 0125
Neckerman n	0095, 0036, 0027, 0105, 0187, 0178, 0223, 0175, 0148, 0125, 0209
NEI	0105, 0187, 0223
Neufunk	0130, 0223, 0148
New Tech	0106, 0105, 0130, 0223, 0175, 0148
New World	0048, 0183
NewTech	0125
Nicamagic	0036, 0072, 0200
Nikkai	0198, 0036, 0048, 0105, 0187, 0130, 0179, 0223, 0072, 0175, 0183, 0200, 0125
Noblisko	0036, 0064, 0072, 0200
Nokia	0242

Nordic	0125
Nordmende	0095, 0242, 0105
Nordvision	0187
Novatronic	0223
Oceanic	0242, 0229
Okano	0223, 0209
ONCEAS	0036
Onwa	0183
Opera	0223
Orbit	0105, 0223
Orion	0089, 0216, 0106, 0105, 0187, 0130, 0223, 0136
Orline	0223, 0183
Orsowe	0136
Osaki	0198, 0036, 0048, 0223, 0175, 0183, 0125
Osio	0157
Oso	0048, 0183
Osume	0179, 0183
Otto Versand	0036, 0105, 0088, 0187, 0178, 0179, 0223, 0175, 0148, 0125, 0136
Pael	0036, 0072, 0200
Palladium	0036, 0178, 0223, 0175, 0148, 0125, 0209
Palsonic	0125
Panama	0198, 0036, 0106, 0130, 0223, 0072, 0175, 0200, 0125
Panasonic	0124, 0232, 0181, 0170, 0268, 0024, 0201, 0163, 0202, 0067, 0083, 0242, 0223, 0136
Panavision	0223
Pathe Cinema	0036, 0088, 0072, 0229, 0200, 0007, 0209
Pathe Marconi	0087
Pausa	0106, 0130
Perdio	0223, 0200
Perfekt	0223

Philco	0095, 0088, 0223, 0064, 0209
Philharmonic	0036, 0175, 0125
Philips	0068, 0077, 0110, 0115, 0005, 0045, 0119, 0104, 0071, 0002, 0139, 0033, 0084, 0057, 0123, 0222, 0237, 0086, 0196, 0167, 0207, 0031, 0012, 0030, 0239, 0121, 0256, 0159, 0059, 0258, 0095, 0036, 0105, 0088, 0187, 0190, 0223
Phoenix	0095, 0105, 0187, 0223, 0072, 0200, 0209
Phonola	0095, 0105, 0187, 0190, 0223, 0072, 0148, 0200
Pioneer	0242, 0105, 0187, 0223, 0209
Plantron	0198, 0105, 0130, 0223
Playsonic	0175, 0125
Poppy	0106, 0130
Prandoni-Prince	0027, 0064, 0136
Precision	0036, 0175, 0125
Prima	0106, 0242, 0130
Profex	0106, 0130
Profi-Tronic	0105, 0223
Proline	0105, 0190, 0223
Prosonic	0036, 0187, 0223, 0072, 0200, 0125, 0209
Protech	0198, 0036, 0106, 0105, 0088, 0187, 0125
Provision	0187, 0223, 0109
Pye	0105, 0187, 0190, 0223, 0148
Pymi	0106, 0130
Quandra Vision	0229

Quelle	0198, 0036, 0105, 0088, 0187, 0178, 0179, 0223, 0175, 0125, 0157
Questa	0179
Radialva	0223, 0183
Radiola	0105, 0187, 0190, 0223, 0148, 0125
Radiomarelli	0095, 0223, 0136
RadioShack	0223
Radiotone	0105, 0130, 0223, 0209
Recor	0223
Redstar	0223
Reflex	0223
Revox	0105, 0187, 0223, 0209
Rex	0198, 0027, 0242
RFT	0095, 0007, 0209
Rhapsody	0200
R-Line	0105, 0187, 0223
Roadstar	0061, 0198, 0106, 0048, 0130, 0183
Robotron	0095
Rowa	0200, 0125
Royal Lux	0209
RTF	0095
Saba	0149, 0153, 0142, 0193, 0095, 0242, 0136
Saisho	0198, 0036, 0106, 0130, 0175, 0125, 0136
Salora	0027, 0242, 0088, 0157, 0136
Sambers	0064, 0136
Samsung	0211, 0054, 0075, 0049, 0234, 0043, 0198, 0036, 0106, 0105, 0187, 0130, 0223, 0072, 0175, 0148, 0200, 0125, 0157, 0209
Sandra	0036, 0072, 0175, 0200, 0125
Sansui	0105, 0223

Sanyo	0177, 0036, 0088, 0130, 0179, 0072, 0175, 0200, 0125, 0007, 0209
SBR	0187, 0190, 0223, 0148
SCHAUB LORENTZ	0242
Schneider	0036, 0048, 0105, 0088, 0187, 0190, 0223, 0175, 0183, 0148, 0125
SEG	0198, 0036, 0088, 0187, 0130, 0179, 0223, 0072, 0175, 0200, 0125
SEI	0178, 0223, 0136
SEI-Sinudyne	0095, 0242, 0136
Seleco	0027, 0242, 0088
Sencora	0106, 0130
Sentra	0130, 0183
Serino	0200
Sharp	0094, 0240, 0186, 0126, 0131, 0179, 0136
Siarem	0095, 0088, 0223, 0136
Sierra	0105, 0190, 0223, 0148
Siesta	0209
Silva	0072, 0200
Silver	0179
Singer	0095, 0088, 0229
Sinudyne	0095, 0088, 0187, 0178, 0223, 0136
Skantic	0242
Solavox	0242
Sonitron	0175, 0125, 0209
Sonoko	0198, 0036, 0106, 0105, 0187, 0130, 0223, 0175, 0206, 0125
Sonolor	0242, 0178, 0229
Sontec	0105, 0187, 0223, 0209

Sony	0150, 0127, 0112, 0244, 0100, 0156, 0251, 0021, 0011, 0018, 0132, 0215, 0106, 0178, 0179
Sound & Vision	0048, 0183
Soundwave	0105, 0187, 0223
Standard	0036, 0106, 0048, 0105, 0130, 0223, 0175, 0183, 0125
Star Lite	0130, 0223
Starlight	0187
Stenway	0183, 0206
Stern	0027, 0242
Strato	0130, 0223
Stylandia	0125
Sunkai	0106, 0183
Sunstar	0130, 0223
Sunwood	0106, 0105, 0130, 0223
Superla	0036, 0072, 0200, 0125, 0136
SuperTech	0130, 0223, 0072, 0148, 0200
Supra	0106, 0130
Susumu	0048
Sutron	0106, 0130
Sydney	0036, 0072, 0175, 0200, 0125
Sysline	0187
Sytong	0072, 0200
Tandy	0036, 0048, 0242, 0175, 0183, 0125
Tashiko	0036, 0027, 0179, 0072, 0175, 0200, 0125
Tatung	0061, 0036, 0105, 0187, 0223, 0175, 0125, 0136

TCM	0111, 0168, 0199, 0103, 0189, 0198, 0106, 0093, 0154, 0028, 0000, 0063, 0197, 0078, 0259, 0116, 0158, 0169, 0076, 0205, 0141, 0230, 0185, 0171, 0066, 0194, 0180, 0051, 0191, 0250, 0165, 0023, 0019, 0267, 0226
Teac	0223, 0125
Tec	0036, 0106, 0088, 0130, 0175, 0125
TEDELEX	0125
Teleavia	0087
Telecor	0223, 0175, 0183, 0125
Telefunken	0105, 0223
Telegazi	0223, 0183
Telemeister	0223
Telesonic	0223
Telestar	0223
Teletech	0106, 0187, 0130, 0223
Teleton	0036, 0179, 0175, 0125
Televideon	0072, 0200
Televiso	0229
Tensai	0106, 0048, 0105, 0130, 0223, 0175, 0183, 0125
Tesmet	0105
Tevion	0198, 0106
Texet	0036, 0130, 0175, 0200, 0125
Thomson	0176, 0149, 0058, 0153, 0261, 0193, 0036, 0105, 0223, 0087
Thorn	0187, 0223, 0109
Tokai	0105, 0223, 0175, 0125
Tokyo	0036, 0072, 0200
Tomashi	0206

Toshiba	0114, 0138, 0184, 0129, 0236, 0134, 0081, 0245, 0061, 0216, 0179, 0125
Towada	0242, 0088, 0125
Trakton	0125
Trans Continsens	0223, 0175, 0125
Transtec	0200
Trident	0175, 0125, 0136
Tristar	0183
Triumph	0223, 0148, 0136
Uher	0242, 0105, 0223, 0064, 0209
Ultravox	0095, 0036, 0088, 0223, 0072, 0200
Unic Line	0223
United	0187
Universum	0198, 0105, 0088, 0187, 0178, 0179, 0223, 0064, 0175, 0125, 0157, 0209
Univox	0223
Vestel	0027, 0242, 0105, 0088, 0187, 0223, 0175, 0125
Vexa	0106, 0187, 0130, 0223
Victor	0105
VIDEOLOGIC	0200
Videologique	0036, 0048, 0072, 0175, 0183, 0200, 0125
VideoSystem	0105, 0223
Videotechnic	0072, 0175, 0200, 0125
Visiola	0036, 0072, 0200
Vision	0105, 0223, 0125
Vortec	0105, 0187, 0223
Voxson	0095, 0027, 0242, 0105, 0223, 0064
Waltham	0036, 0223, 0175, 0125
Watson	0105, 0187, 0223, 0183
Watt Radio	0036, 0088, 0072, 0200

Wega	0095, 0179, 0223
Wegavox	0130
Weltblick	0105, 0187, 0223, 0125
Weston	0088
White Westinghouse	0036, 0187, 0223, 0072, 0200
Windstar	0206
Xrypton	0223
Yamishi	0223, 0175, 0183, 0206, 0125
Yokan	0223
Yoko	0198, 0036, 0106, 0048, 0105, 0187, 0130, 0223, 0175, 0183, 0200, 0125, 0209
Yorx	0048, 0183
Zanussi	0027, 0175, 0125

TV - TV/Tuner

Philips	0192
---------	------

TV - TV/VCR Combo

Aiwa	0061
Bush	0061
Bush	0061
Daewoo	0155, 0248
Goodmans	0216
Grundig	0040
LG	0099
Orion	0216
Panasonic	0083
Philips	0012, 0030, 0239, 0121, 0256, 0159, 0059, 0258
Roadstar	0061
Samsung	0043
Sony	0132, 0215
Tatung	0061
Toshiba	0061, 0216

TV - TV/DVD Combo

Alba	0253
Bush	0253, 0231
Daewoo	0118
LG	0122
Panasonic	0067
Philips	0031

Thomson	0176
Toshiba	0245

VCR - VCR

Innovation	3067
Lifetec	3067
Magnum	3067
Medion	3067
Micromaxx	3067
Microstar	3067
TCM	3067
Tevion	3067
Innovation	3067
Lifetec	3067
Magnum	3067
Medion	3067
Micromaxx	3067
Microstar	3067
TCM	3067
Tevion	3067
Adelsound	3090
Adyson	3005
Aiwa	3073, 3068, 3100, 3036, 3053, 3037, 3049
Akai	3069, 3100, 3037
Akiba	3005, 3011
Akura	3100, 3005, 3037, 3011
Alba	3073, 3069, 3005, 3012, 3049, 3001, 3080, 3011
Ambassador	3069, 3080
Amstrad	3073, 3005, 3012, 3053
Anitech	3005, 3011
Ansonic	3090
ASA	3068, 3044, 3064
Asuka	3073, 3068, 3005, 3053, 3044, 3064, 3011
Audiosonic	3012
AudioTon	3069
Baird	3073, 3100, 3012, 3053, 3037, 3001

Basic Line	3069, 3005, 3012, 3049, 3001, 3080, 3011
Baur	3064
Bestar	3069, 3012, 3001, 3080
Black Panther Line	3012, 3001
Blaupunkt	3088, 3043, 3064
Blue Sky	3068
Bondstec	3069, 3005, 3080
Brandt	3100
Bush	3073, 3005, 3012, 3017, 3016, 3036, 3049, 3001, 3011
Casio	3073
Cathay	3012
Catron	3069, 3080
CGE	3073, 3100, 3053, 3037
Cimline	3005, 3049, 3011
Clatronic	3069, 3005, 3080
Condor	3069, 3012, 3001, 3080
Crown	3069, 3005, 3012, 3001, 3080, 3011
Daewoo	3046, 3069, 3012, 3072, 3087, 3091, 3101, 3001, 3080
Dansai	3005, 3012, 3011
Dantax	3049
Daytron	3012, 3001
De Graaf	3064
Decca	3073, 3100, 3053, 3037, 3064
Denko	3005
Diamant	3068
Dual	3073, 3100, 3012, 3037, 3064
Dumont	3073, 3053, 3064
Elbe	3012
Elcatech	3005
Elsay	3005
Elta	3005, 3012, 3011
Emerson	3005
ESC	3069, 3012, 3001

Etzuko	3005, 3011
Europhon	3069
Ferguson	3073, 3100, 3037
Fidelity	3073, 3005, 3053
Finlandia	3073, 3064
Finlux	3073, 3053, 3037, 3064
FIRST LINE	3049, 3044, 3011
Firstline	3068, 3005
Fisher	3069
Flint	3049
Formenti/P hoenix	3064
Frontech	3069, 3080
Fujitsu	3073, 3053
Funai	3073, 3053
Galaxy	3073, 3053
GBC	3069, 3080, 3011
GEC	3064
Geloso	3011
General	3069, 3080
General Technic	3088, 3049
GoldHand	3005, 3011
GoldStar	3073, 3068, 3053, 3044
Goodmans	3073, 3069, 3068, 3005, 3012, 3021, 3053, 3001, 3080, 3044, 3011
Graetz	3100, 3037
Granada	3073, 3043, 3068, 3064
Grandin	3073, 3069, 3068, 3005, 3012, 3053, 3001, 3080, 3044, 3011
Grundig	3043, 3040, 3064, 3011
Hanseatic	3068, 3012, 3044, 3064
Hantor	3069
Harwood	3005
HCM	3005, 3011
Hinari	3090, 3100, 3005, 3012, 3049, 3011
Hisawa	3049

Hitachi	3092, 3073, 3090, 3100, 3054, 3053, 3037, 3064
Hypson	3005, 3012, 3049, 3011
Impego	3069, 3080
Imperial	3073, 3053
Ingersol	3090
Inno Hit	3069, 3005, 3012, 3001, 3080, 3064, 3011
Innovation	3088, 3049
Interbuy	3068, 3005, 3044
Interfunk	3064
Intervision	3073, 3068, 3012, 3053
Irradio	3068, 3005, 3044, 3011
ITT	3100, 3037
ITV	3069, 3068, 3012, 3001, 3044
JVC	3086, 3015, 3100, 3013, 3085, 3037
Kaisui	3005, 3011
Karcher	3064
Kendo	3068, 3005, 3049, 3001, 3080
Kenwood	3100, 3037
Korpel	3005, 3011
Kyoto	3005
Lenco	3001
Leyco	3005, 3011
LG	3098, 3056, 3073, 3068, 3000, 3082, 3030, 3053, 3044
Lifetec	3088, 3049
Loewe	3088
Loewe	3090, 3043, 3068, 3044, 3064
Logik	3090, 3005, 3011
Lumatron	3012, 3001
Luxor	3005
M Electronic	3053
Manesth	3005, 3011
Marantz	3043, 3064
Mark	3012

Matsui	3073, 3090, 3068, 3049, 3044
Mediator	3064
Medion	3088, 3049
M- Electronic	3073, 3068
Memorex	3073, 3068, 3053, 3044
Memphis	3005, 3011
Metz	3088, 3043
Micromaxx	3088, 3049
Microstar	3088, 3049
Migros	3073, 3053
Mitsubishi	3053, 3064
Multitech	3073, 3069, 3005, 3053, 3080, 3064, 3011
Murphy	3073, 3053
National	3088
NEC	3100, 3037
Neckerman n	3043, 3100, 3037, 3064
NEI	3064
Nesco	3073, 3005, 3011
Nikkai	3069, 3005, 3012, 3080
Nokia	3100, 3012, 3037
Nordmend e	3100, 3037
Oceanic	3073, 3100, 3053, 3037
Okano	3005, 3012, 3049
Orion	3090, 3017, 3021, 3049
Orson	3073, 3053
Osaki	3073, 3068, 3005, 3053, 3044, 3011
Otto Versand	3064
Palladium	3090, 3043, 3068, 3100, 3005, 3037, 3044, 3011
Panasonic	3051, 3057, 3079, 3066, 3028, 3039, 3071, 3088, 3024, 3025, 3045, 3018
Pathe Cinema	3090

Pathe Marconi	3100, 3037
Perdio	3073, 3053
Philco	3005
Philips	3048, 3006, 3038, 3029, 3052, 3061, 3019, 3093, 3007, 3043, 3041, 3010, 3070, 3009, 3077, 3081, 3035, 3027, 3065
Phonola	3064
Pioneer	3064
Portland	3069, 3012, 3001, 3080
Prinz	3073, 3053
Profex	3011
Proline	3073, 3053
Prosonic	3073, 3012, 3049
Pye	3048, 3064
Quelle	3043, 3053, 3064
Radialva	3068, 3005
Radiola	3064
Rex	3100, 3037
RFT	3069, 3005, 3080, 3064
Roadstar	3068, 3005, 3012, 3036, 3001, 3044, 3011
Royal	3005
Saba	3100, 3037
Saisho	3090, 3049, 3011
Samsung	3084, 3047, 3096, 3095, 3034, 3023, 3063, 3067
Samurai	3100, 3005, 3080
Sansui	3037
Sanwa	3090
Sanyo	3050
Saville	3012
SBR	3064
Schaub Lorenz	3073, 3100, 3053, 3037
Schneider	3073, 3068, 3005, 3012, 3053, 3049, 3001, 3080, 3044, 3064, 3011
SEG	3005, 3012, 3011

SEI-Sinudyne	3090, 3064
Seleco	3069, 3068, 3100, 3037
Senra	3069, 3005, 3080
Sentron	3005, 3011
Sharp	3026, 3062, 3099
Shintom	3005, 3011
Shivaki	3068, 3044
Shorai	3090
Siemens	3043, 3068, 3044
Silva	3068, 3044
Silver	3012
Sinudyne	3090, 3064
Solavox	3080
Solovox	3069
Sonneclair	3005
Sonoko	3012, 3001
Sontec	3068, 3044
Sony	3078, 3042, 3076, 3032, 3060, 3008, 3055, 3058, 3094
Soundwave	3068
Standard	3012, 3001
Starlite	3068
Stern	3012
Sunkai	3049
Sunstar	3073, 3053
Suntronic	3073, 3053
Sunwood	3005, 3011
Supra	3068
Symphonic	3073, 3005
Taisho	3090, 3049
Tandberg	3012
Tashiko	3073, 3068, 3053
Tatung	3073, 3100, 3036, 3053, 3037, 3064
TCM	3088, 3004, 3014, 3089, 3049, 3074, 3075, 3022, 3020, 3031, 3003, 3097
Teac	3073, 3100, 3012
Tec	3069, 3005, 3012, 3080
Technics	3088
Teleavia	3100, 3037

Telefunken	3100, 3037
Teletach	3005, 3012
Tenosal	3005, 3011
Tensai	3073, 3090, 3068, 3005, 3053, 3044, 3011
Tevion	3088, 3049
Thomson	3002, 3100, 3037
Thorn	3068, 3100, 3037
Tokai	3068, 3100, 3005, 3044, 3011
Tonsai	3011
Toshiba	3083, 3033, 3100, 3059, 3016, 3021, 3037, 3064
Towada	3005, 3011
Towika	3005, 3011
TVA	3069, 3080
Uher	3068, 3044
Ultravox	3012
United Quick Star	3012, 3001
Universum	3073, 3043, 3068, 3053, 3044, 3064
Videon	3088, 3049
Weltblick	3044
Wetblick	3068
Yamishi	3005, 3011
Yokan	3005, 3011
Yoko	3069, 3068, 3005, 3080, 3044, 3011

VCR - TV/VCR Combo

Aiwa	3036
Bush	3016
Bush	3036
Daewoo	3091, 3101
Goodmans	3021
Grundig	3040
LG	3030
Orion	3021
Panasonic	3018
Philips	3010, 3070, 3009, 3077, 3081, 3035, 3027, 3065
Roadstar	3036
Samsung	3063
Sony	3058, 3094

Tatung	3036
Toshiba	3016, 3021

VCR - DVD/VCR Combo

Bush	3017
Daewoo	3072, 3087
Hitachi	3054
JVC	3013, 3085
LG	3000, 3082
Orion	3017
Panasonic	3025, 3045
Philips	3041
Samsung	3096, 3095, 3034, 3023
Sanyo	3050
Sharp	3099, 3099
Sony	3055
TCM	3089
Toshiba	3059

DVD - DVD

Magnum	4032
Aiwa	4040, 4028
Akai	4033
Akura	4015
Alba	4024, 4129, 4046
Best Buy	4078
Brandt	4104, 4155, 4114
Bush	4084, 4046, 4079, 4143, 4125, 4019, 4093, 4088
Cambridge Audio	4108
Centrex	4162
CGV	4108
Classic	4095
Clatronic	4088
Conia	4093
C-Tech	4134
CyberHome	4105, 4072, 4168, 4083
Daewoo	4172, 4103, 4126, 4063
Dansai	4148
Daytek	4054, 4085
DEC	4088
Denon	4014, 4178, 4007
Denver	4088, 4015

Denzel	4060
Diamond	4108, 4134
DK Digital	4181, 4174
Dual	4060
DVX	4134
Easy Home	4078
Eclipse	4108
Elta	4043
Eltax	4006
Enzer	4060
Finlux	4108
Gericom	4064
Global Solutions	4134
Global Sphere	4134
GoldStar	4150
Goodmans	4004, 4088, 4162
Graetz	4060
Grundig	4013, 4099, 4162
H&B	4088
Haaz	4108, 4134
HiMAX	4078
Hitachi	4050, 4094, 4032, 4060, 4078, 4121, 4115
Humax	4117
Innovation	4118, 4032
JVC	4156, 4159, 4081, 4122, 4114, 4066
Kenwood	4137, 4157, 4153
Kingavon	4088
Kiss	4060
Koda	4088
KXD	4078
Lawson	4134
Lenco	4088
LG	4150, 4180, 4059, 4056, 4170
Life	4118
Lifetec	4118, 4032
Limit	4134
Loewe	4070
LogicLab	4134
Luxor	4162

Magnavox	4114, 4088, 4096
Marantz	4087, 4169, 4009, 4142
Matsui	4155, 4146
Medion	4118, 4032
Metz	4086
MiCO	4108
Micromaxx	4118, 4032
Micromedia	4114
Microstar	4118, 4032
Mizuda	4088, 4078
Monyka	4060
Mustek	4001, 4095, 4123
Mx Onda	4108
Naiko	4162
Neufunk	4060
NU-TEC	4093
Onkyo	4048, 4114, 4096
Orava	4088
Orion	4065, 4143
Oritron	4118
P&B	4088
Pacific	4134
Panasonic	4077, 4141, 4034, 4027, 4147, 4166, 4026, 4038, 4124, 4110
Philips	4164, 4100, 4002, 4131, 4173, 4035, 4087, 4113, 4075, 4142, 4114, 4096
Pioneer	4097, 4154, 4145, 4042, 4023, 4086, 4179
Proline	4162
Provision	4088
Raite	4060
RedStar	4015
Reoc	4134
Roadstar	4128, 4088
Rowa	4093, 4162
Saba	4104, 4155
Sabaki	4134
Samsung	4050, 4138, 4030, 4107, 4044, 4098
Sansui	4108, 4134

Sanyo	4132, 4057, 4175, 4008, 4109
ScanMagic	4001
Schneider	4118
Scientific Labs	4134
Scott	4022
SEG	4024, 4069, 4060, 4134
Sharp	4149, 4102, 4067
Sigmathek	4078
Silva	4015
Singer	4108, 4134
Skymaster	4069, 4095, 4134
Skyworth	4015
SM Electronic	4134
Sony	4130, 4167, 4176, 4039, 4011, 4031, 4055, 4135, 4152, 4106, 4140, 4025
Soundmaster	4134
Soundmax	4134
Standard	4134
Star Cluster	4134
Starmedia	4088
Supervision	4134
Synn	4134
TCM	4021, 4116, 4037, 4163, 4045, 4073, 4118, 4032, 4139, 4165, 4000, 4091
Teac	4177, 4086, 4093, 4134
Tec	4015
Tevion	4118, 4032, 4134
Thomson	4104, 4053
Tokai	4060, 4015
Toshiba	4082, 4089, 4076, 4114, 4096
TruVision	4078
Wharfedale	4108, 4134
Xlogic	4134
Yakumo	4162
Yamada	4162

Yamaha	4136
Yamakawa	4060
Yukai	4001
Zenith	4114, 4096

DVD - DVD Recorder

JVC	4036, 4071, 4012, 4010
LG	4112
Panasonic	4151, 4133, 4092
Philips	4080, 4020, 4127, 4061, 4120, 4052
Samsung	4144, 4058, 4101
Sony	4029, 4171, 4005, 4062, 4158, 4090, 4051, 4018, 4161
TCM	4116
Toshiba	4047, 4119, 4016
Yukai	4017

DVD - DVD-DVR

Panasonic	4151, 4133
Philips	4003, 4111
Pioneer	4160, 4049, 4041
Samsung	4068
Toshiba	4047

DVD - SAT/DVD

Humax	4117
-------	------

DVD - TV/DVD Combo

Alba	4125
Bush	4125, 4019
Daewoo	4063
LG	4056
Panasonic	4166
Philips	4075
Thomson	4053
Toshiba	4076

DVD - DVD/VCR Combo

Bush	4143
Daewoo	4103, 4126
Hitachi	4115
JVC	4081, 4122
LG	4150, 4150
Orion	4143
Panasonic	4027, 4147
Philips	4113
Samsung	4101, 4030, 4107, 4044

Sanyo	4175
Sharp	4102, 4067
Sony	4135
TCM	4021
Toshiba	4089

DVD - HTIB

Aiwa	4028
DK Digital	4174
Eltax	4006
Hitachi	4121
JVC	4066
Kenwood	4153
LG	4170
Mustek	4123
Panasonic	4026, 4038, 4124, 4110
Philips	4074
Pioneer	4179
Samsung	4098
Sanyo	4008, 4109
Sony	4152, 4106, 4140, 4025
TCM	4073

AUDIO - Amplifier

Bush	2023
Denon	2062, 2025, 2020, 2032, 2109
Goodmans	2084
Grundig	2023
Kenwood	2087
Linn	2023
Marantz	2023, 2010, 2063, 2070, 2000
Meridian	2023
Micromega	2023
Naim	2023
Philips	2023
Pioneer	2023, 2017, 2111, 2099, 2071, 2045
Quad	2023
Rotel	2009
Sony	2114, 2054, 2080, 2051, 2046
Teac	2056, 2039, 2022
Technics	2107, 2049, 2077
Thorens	2023

Yamaha	2093, 2003, 2086, 2035, 2115, 2002
AUDIO - LCD TV/RadioTuner Combo	
Philips	2044
AUDIO - Receiver	
Pioneer	2081
Yamaha	2086
AUDIO - Receiver/Amplifier	
Yamaha	2003
AUDIO - Receiver/Tuner	
Aiwa	2079, 2043
Akai	2092
Denon	2109, 2091, 2074, 2068, 2015, 2047, 2096, 2067, 2088, 2014
DK Digital	2040
Eltax	2011
GoldStar	2095
Goodmans	2092
Grundig	2116, 2066, 2095
Harman/Kardon	2117, 2116
Hitachi	2033
JVC	2061, 2094, 2110
Kenwood	2038, 2024, 2050
LG	2095, 2001
Marantz	2116, 2066, 2000, 2103, 2041, 2089, 2102, 2083
Micromega	2116
Mitsubishi	2092
Okano	2092
Onkyo	2100, 2112
Panasonic	2030, 2019, 2052, 2108, 2097
Philips	2116, 2000, 2104, 2028
Pioneer	2081, 2006, 2058, 2036, 2090, 2037, 2064, 2053, 2069
Revox	2116
Rotel	2009
Samsung	2076
Sansui	2116
Sanyo	2066, 2026, 2105

Sharp	2027
Sony	2012, 2029, 2008, 2065, 2046, 2013, 2082, 2031, 2072, 2075
TCM	2106, 2098, 2034, 2118, 2016
Teac	2117
Technics	2048, 2073, 2030
Thomson	2085, 2055, 2042
Thorens	2116
Universum	2095, 2092
Yamaha	2003, 2021, 2101, 2005, 2018, 2004, 2007, 2060

AUDIO - Tuner

Mustek	2057
Philips	2044, 2059
Pioneer	2064, 2053
Sony	2113
Yamaha	2093

AUDIO - TV/Tuner

Philips	2059
---------	------

AUDIO - HTIB

Aiwa	2043
DK Digital	2040
Eltax	2011
Hitachi	2033
JVC	2110
Kenwood	2050
LG	2001
Mustek	2057
Panasonic	2019, 2052, 2108, 2097
Philips	2028
Pioneer	2069
Samsung	2076
Sanyo	2026, 2105
Sony	2072, 2075, 2113, 2113
TCM	2106

CD - CD

Adcom	4191
Aiwa	4206
Arcam	4205
Bush	4184

Carrera	4195
Denon	4188, 4202
Dual	4191
Elta	4204
Emerson	4191
Fisher	4198
GoldStar	4195
Grundig	4205
Harman/Kardon	4193
Hitachi	4191
Innovation	4204
JVC	4182
Kenwood	4198
LG	4195
Lifetec	4204
Linn	4205
Magnum	4204
Marantz	4205, 4186, 4192
Matsui	4205
Medion	4204
Memorex	4191
Meridian	4205
Micromaxx	4204
Micromega	4205
Microstar	4204
Mission	4205
Naim	4205
Onkyo	4190
Panasonic	4184
Philips	4205, 4197
Philips CD-V	4190
Pioneer	4207, 4200
Proton	4205
Quad	4205
Realistic	4191
Rotel	4205, 4187
Saba	4191
SAE	4205
Samsung	4203
Sansui	4205
Schneider	4205
Sony	4183
Tandberg	4205

TCM	4204, 4194, 4185
Teac	4199
Technics	4196
Telefunken	4191

Tevion	4204
Thomson	4191
Universum	4205
Victor	4182

Victor	4195
Research	
Yamaha	4201