


Operating Manual For Easy Clicker

UR2-211

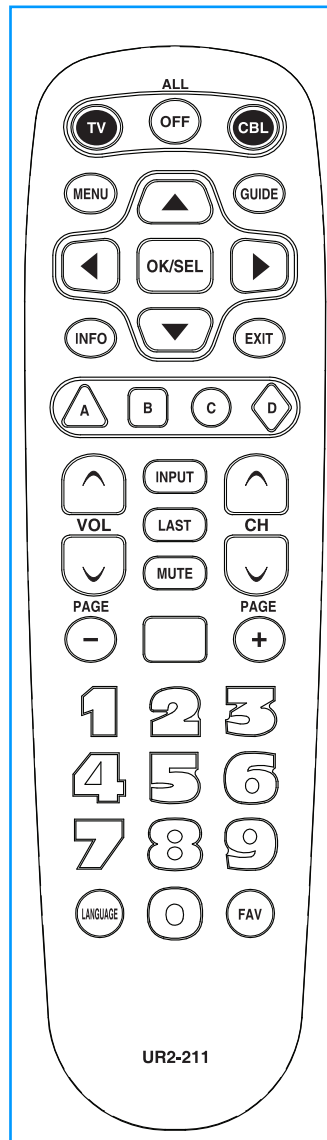

1 Introduction

This remote control is designed to operate most Digital, Analog Cable boxes, IPTV set top boxes and TVs.


2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

STEP1 Remove the battery compartment cover from the back of your remote control.

STEP2 Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP3 Replace the battery compartment cover.

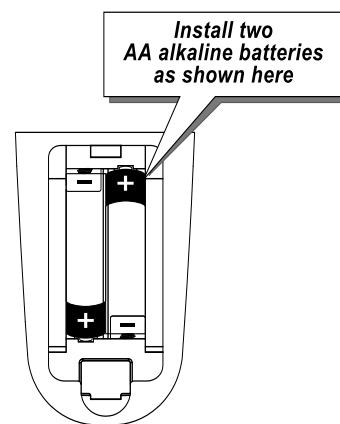

4 Programming the Remote Control

**Note : In this section, when you are instructed to press a [DEVICE] button, that means you should press either the CBL or TV button, depending on which device you are programming the remote to operate.*

A. Quick Set-Up Method

(Refer to the Section 5 Quick Set-up table of codes)

STEP1 Turn on the equipment you want to program. To program your TV, turn on the TV.

3 Button Functions

TV, CBL
Used to select the Device you want to operate and signals remote control activity.

ALL OFF
Designed to send Power On/Off commands for up to two Components with one buttons press.

GUIDE
Displays the program guide listings.

SETTINGS / MENU
Displays the settings Menu.

OK/SEL
Selects highlighted screen options.

INFO
Displays information about the program currently playing or highlighted in the program guide.

LAST.....
Accesses the previously tuned channel.

VOL ▲/▼
Raises or lowers the sound level.

PAGE ▲/▼
Accesses pages above or below the information currently displayed.

LANGUAGE
Change the language.

ALL
ALL OFF

TV
TV

OFF
OFF

CBL
CBL

GUIDE
GUIDE

▲, ►, ▼, ◀
Highlight an item from th on-screen choices.

EXIT
Exit from current screen.

A, B, C, D
Make direct selections from on-screen menus.

INPUT
Selects the video source from available video components.

CH ▲/▼
Selects the next higher or lower channel.

MUTE
Silences the audio. Press to activate. Press this key again to restore sound to previous level.

Macro Button
For future use

NUMBER Pad
Enter numbers to tune to channels. Also make numeric entries on on-screen menus. You can also use the Ch▲/▼and the guide as alternate ways to tune to channels.

FAV
Displays favorite channel .

INFO
INFO

EXIT
EXIT

A
A

B
B

C
C

D
D

INPUT
INPUT

LAST
LAST

CH
CH

VOL
VOL

MUTE
MUTE

PAGE
PAGE

PAGE
PAGE

1
1

2
2

3
3

4
4

5
5

6
6

7
7

8
8

9
9

LANGUAGE
LANGUAGE

0
0

FAV
FAV

UR2-211

STEP2 Point the remote at the component and press and hold the [DEVICE] key for 5 seconds until the Device LED blinks off and turns back on. Continue holding the [DEVICE] key and press the numberkeys, one at a time, starting with 1, then 2, 3...0. Stop pressing the number keys when the device turns off.

STEP3 Release the [DEVICE] key to save the code. The Device LED will blink twice to confirm the code is stored.

Repeat the steps above for all components(CBL, TV).

B. Manual Programming

The remote control can be programmed by entering a three-digit code number that corresponds to particular brands and models of equipment. The three-digit code numbers are listed in the code tables sections of this instruction manual.

STEP1 Turn on the equipment that you want the remote control to operate (Cable Box or TV).

STEP2 Press the [DEVICE] button and the [OK/SEL] button simultaneously for 3 seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP3 Point the remote control

toward the equipment and enter the three-digit code number assigned to your brand from the code tables. If there are more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

**Note: You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above using the next three digit code number from the brand list.*

STEP4 Store the three-digit code by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

C. Auto Search Method

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by following steps:

STEP1 Turn on the equipment that you want the remote control to operate (Cable Box or TV).

STEP2 Press the [DEVICE] button and the [OK/SEL] button simultaneously for 3 seconds. The device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP3 Press the [CH ▲] or [CH ▼] button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the [CH ▲] or [CH ▼] button as soon as the equipment turns off.

**Note: You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above to continue the Auto Search Method.*

STEP4 Press the same [DEVICE] button to store the code. The Device LED will blink twice to confirm that the code has been stored.

D. Programming the All Off Button

This allows you to program the All Off button so it can send up to two power On/Off commands with one button press.

STEP1 Press the [CBL] button.

STEP2 Press the [All OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP3 Press the first [Device] button you want to store in the [ALL OFF] button and then the [POWER] button. Repeat this for other Device until you have stored all the desired power commands into the [ALL OFF] button.

STEP4 Press the [CH ▲] button to save the power commands you stored. The [CBL] button will blink twice to confirm the Device have been saved.

E. Programming Volume Control

By default, the VOL+, VOL- and MUTE keys operate through your TV. If you would like those keys to operate those functions on a different device, follow these steps.

STEP1 Press the [OK/SEL] button and [CBL] button simultaneously for 3 seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [VOL+] button. The device LED will blink.

STEP3 Press the [DEVICE] button corresponding to the device that you would like the

